



2" HORIZONTAL INSTALLATION INSTRUCTIONS

- ➊ After removing blind from carton, check that you also have a package of installation hardware.
- ➋ If possible, hold the blind in the position you want it to hang and extend it to full length. Make sure it is centred and level.
- ➌ When it is positioned properly, make a small pencil mark on the mounting surface at the top of the blind to refer to when placing the mounting brackets. When establishing mounting hardware position, make sure it will not interfere with the inside mechanism of the headrail.
- ➍ Check for anything protruding (eg. window crank handles) which might interfere with the operation of the blind, and adjust position accordingly.

MOUNTING SURFACES

- ✓ If installing on the wall outside a frame, you will have to place blocks between the wall and brackets to bring the blind forward enough to clear the casing.
- ✓ If installing on a wood surface, drill a small pilot hole before using screws to avoid marring or splitting the wood.
- ✓ If installing on a metal surface, drill holes with a high speed bit, after making a depression with a centre punch.
- ✓ If installing on plaster, drywall, concrete, brick, or tile, you must use plugs or anchors.

Mount End Brackets

Right hand and left hand brackets are packed with each blind. Brackets are stamped on the inside for easy identification. Open hinged cover plate.(Fig. 1)


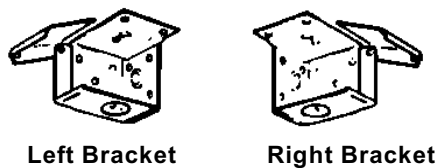


Figure 1

Inside Mount

To mount end brackets, spot and start screw holes with any pointed tool (Fig. 2). Be sure brackets are level! Insert screws through side of bracket in a diagonal line. (Fig. 3)

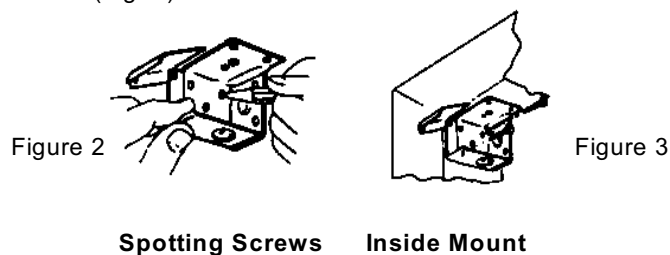


Spotting Screws

Inside Mount


Outside/Ceiling Mount

(Fig 4+5) Brackets should be spaced 1/4" farther apart than the width of the blind. To mount end brackets, spot and start screw holes with any pointed tool. Be sure brackets are level! Insert screws through side of bracket in a diagonal line.

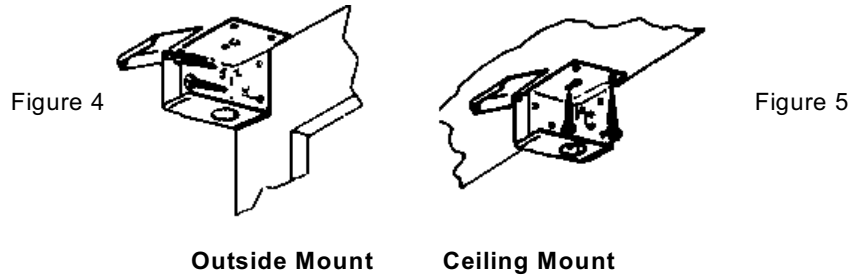


Centre Support(s)

These are supplied for blinds over 40" wide. Space supports evenly along headrail. Position each one so that it will not interfere with hardware inside the headrail. Align bottom of bracket with bottoms of end brackets. (Fig 6+7)

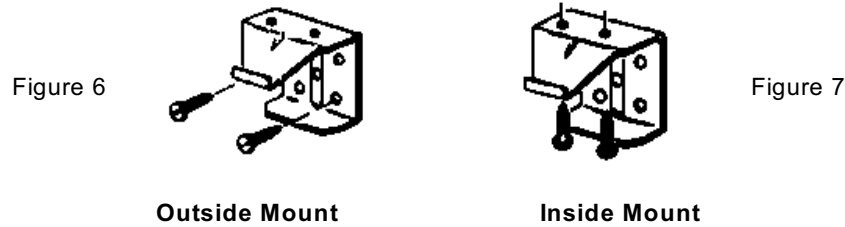

Valance

Attach valance clips by snapping them onto the top edge of the headrail. Then insert the valance between the clamps. (Fig 8)

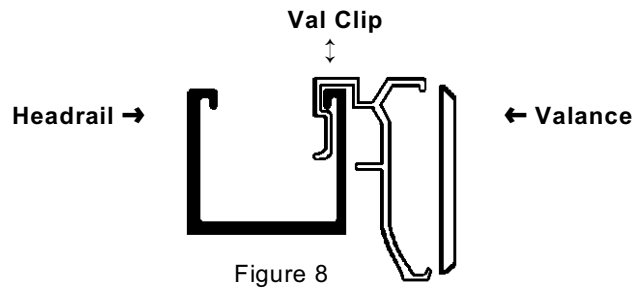

Hold - Down Brackets (optional) (Fig 9)

Insert the hold-down pin into the small holes drilled into the ends of the bottom rail. Fully extend the blind, and mark the location of holes where the screws are to be used. Pre-drill the holes to avoid splitting the casing.

